

ENGLISH

FAN MW-3546 BK

The fan is intended for artificial ventilation of the room

FAN DESCRIPTION

1. Front safety grid
2. Plastic blade clamp
3. Clamp ring
4. Fastening screw
5. Blades
6. Rear grid plastic fastening nut
7. Rear grid
8. Fan carrying handle
9. Motor axis
10. Control panel
11. Oscillation On/Off button
12. Motor unit
13. Motor unit clamp
14. Telescopic bar
15. Telescopic bar clamp
16. Decorative panel
17. Supports
18. Fastening screws

SAFETY MEASURES

Before using the electrical appliance, read this instruction manual carefully, and keep it for further reference.

Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.

- Before switching the unit on for the first time, make sure that your home mains voltage corresponds to unit operating voltage.
- Before using the unit, examine the power cord closely and make sure that it is not damaged. If you find that the power cord is damaged, do not use the unit.
- Do not use the fan outdoors.
- Place the unit on a flat, dry and steady surface away from sources of heat or open flame.
- Do not use the unit near containers filled with water, next to a kitchen sink, in wet basements or near a swimming pool.
- Do not immerse the fan, power cord and power plug into water or any other liquids.
- Do not touch the unit body and the power plug with wet hands.
- If the fan falls into water, unplug it before touching it and only then you may take the fan out of water. Apply to the nearest authorized service center for testing or repairing the unit at the contact addresses given in the warranty certificate and on the website www.maxwell-products.ru.
- Make sure that the power cord does not contact with hot surfaces and sharp furniture edges.
- Do not switch the unassembled fan on.
- Do not insert any foreign objects into the openings of the fan protective grids to avoid injuries or unit damage.
- Do not touch the rotating blades during the fan operation.
- Do not place the fan near curtains or house plants.
- It is not recommended to stay under the air flow coming from the fan for a long time (especially for children and elderly people).

- Do not leave the operating unit unattended.
- Unplug the fan before cleaning and when you do not use the unit or before moving it to a new place.
- When unplugging the fan, pull the plug but not the cord.
- Clean the unit regularly.
- Do not leave children unattended to prevent using the unit as a toy.
- For children safety reasons do not leave polyethylene bags, used as packaging, unattended.

ATTENTION! Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

- Do not allow children to touch the unit body and the power cord during the unit operation.
- The unit is not intended for usage by physically or mentally disabled persons (including children) or by persons lacking experience or knowledge if they are not under supervision of a person who is responsible for their safety or if they are not instructed by this person on the usage of the unit.
- Do not use the fan if the blades, power cord or power plug are damaged, if the fan works improperly, after it was dropped or was damaged in some other way.
- Do not attempt to repair the unit. Do not disassemble the unit by yourself, if any malfunction is detected or after it was dropped, unplug the unit and apply to any authorized service center at the contact addresses given in the warranty certificate and on the website www.maxwell-products.ru.
- Transport the unit in the original package.
- For environment protection do not discard the unit with usual household waste after its service life expiration; apply to a specialized center for further recycling.
- Keep the unit in a dry cool place out of reach of children and disabled persons.

THIS UNIT IS INTENDED FOR HOUSEHOLD USAGE ONLY

BEFORE THE FIRST USE

After unit transportation or storage at low temperature keep it for at least three hours at room temperature.

The fan is supplied disassembled. Do not switch the fan on until it is completely assembled.

- Unpack the unit and remove any stickers that can prevent its operation.
- Check the unit for damages, do not use it in case of damages.
- Set the supports (17) crosswise on a flat dry surface.
- Set the telescopic bar (14) on the supports (17) and fix it with four fastening screws (18).
- Screw out the clamp (15) by rotating it counterclockwise. After removing the clamp (15), set the decorative panel (16) on the telescopic bar (14). Set the clamp (15) back to its place by turning it clockwise for several times.

- Extend the bar (14) to the desired height and fix it by tightening the clamp (15) with a slight effort as you turn it clockwise.
- Install the motor unit (12) on the telescopic bar (14) until bumping and fix it by the clamp (13), do not apply excessive effort when screwing the clamp of the motor unit (13).
- Set the rear grid (7) on the motor unit (12) matching the guides on the motor unit (12) with the corresponding openings on the grid (7).
- The carrying handle (8) on the rear grid (7) should be turned upwards. Fix the rear grid (7) on the motor unit (12) with the plastic nut (6) by screwing it clockwise until bumping.
- Put the blades (5) on the motor axis (7) matching the groove on the blades with the clamp on the motor axis and fix them with the plastic clamp (2) rotating it counterclockwise and holding the blades (5) with your free hand.
- Set the nut and the fixing screw (4) into the clamp ring (3) sockets.
- Match the front grid (1) and the rear grid (7), fix them with the clamp ring (3) and tighten up the clamp ring (3) by turning the fixing screw (4) tight.

Note! For easy grid assembling of the fan first install the clamp ring (3) on the rear grid (7) and tighten up the fastening screw (4) slightly. Install the bottom part of the front grid (1) on the clamp ring (3). Then press the bottom part of the front grid (1) to the clamp ring (3) and squeezing both grids on the both sides install the grid (1) under the clamp ring (3). Tighten the fastening screw (4).

- The fan is ready for operation.

USING THE FAN

- Make sure that the voltage of the mains corresponds to the operating voltage of the unit.
- Make sure that the fan is switched off by pressing the "0" button on the control panel (10).
- You can change the tilt angle of the motor unit (12). Turn the clamp counterclockwise to loosen it and set the desired tilt angle of the motor unit (12), fix the selected tilt angle turning the clamp clockwise.
- Insert the power plug into the mains socket.
- Select the required rotation speed of the blades (5) by pressing buttons on the control panel (10):
 - "0" – fan is switched off;
 - "1" – low blades rotation speed;
 - "2" – medium blades rotation speed;
 - "3" – high blades rotation speed;
- Press the button (11) to switch horizontal rotation of the motor unit on. To switch the rotation off, pull the button (11) upwards.
- Press the "0" button (the fan is switched off) to switch the unit off.
- Remove the power plug from the mains socket.

CLEANING AND CARE

- Switch the unit off and unplug it.
- Never use liquid detergents and abrasives to clean the fan.

- Wipe the unit with a soft dry cloth.
- To clean the blades, remove the front grid (1), having previously loosened the fixing screw (4) and removed the clamp ring (3). Unscrew the blades clamp (2), rotating it clockwise and remove the blades (5).
- Clean the blades (5) with a slightly damp cloth and then wipe them dry.
- Assemble the fan following the assembling instructions in the «Before the first use» chapter.
- Do not immerse the motor unit (12), the power cord and the plug into water or any other liquids.

STORAGE

- Disconnect the unit from the mains and clean it.
- If necessary, dismantle the fan. Remove the clamp ring (3), preliminary loosening the fastening screw (4), the front grid (1) and then the blades (5) by rotating the blades clamp (2) clockwise. Unscrew the plastic nut (6) turning it counterclockwise and remove the rear grid (7) from the motor unit (12).
- Remove the motor unit (12) from the telescopic bar (14). Screw out the clamp (15) by rotating it counterclockwise. After removing the clamp (15), remove the decorative panel (16) from the telescopic bar (14). Unscrew the fastening screws (18) and disconnect the telescopic bar (14) under the supports (17). Disconnect the supports (17).
- Put the fan into the box.
- Keep the unit away from children in a dry cool place.

DELIVERY SET

Motor unit – 1 pc.
Front grid – 1 pc.
Clamp ring with the screw and nut – 1 pc.
Blade clamp – 1 pc.
Blades – 1 pc.
Rear grid – 1 pc.
Telescopic bar with clamp and decorative panel – 1 pc.
Supports – 2 pcs.
Screw – 4 pcs.
Instruction manual – 1 pc.

TECHNICAL SPECIFICATIONS

Power supply: 220-240 V ~ 50/60 Hz
Maximum power consumption: 35 W
Diameter: 40 cm (16")

The manufacturer preserves the right to change the unit specifications without a preliminary notification

Unit operating life is 3 years

Guarantee

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Maxwell

моя первая любовь

Инструкция по эксплуатации

RUS Инструкция по эксплуатации

2

GB Manual instruction

4

www.maxwell-products.com, www.maxwell-products.ru

Напольный вентилятор
MW-3546 BK

RUS

Дата производства изделия указана в серийном номере на табличке с техническими данными. Серийный номер представляет собой одиннадцатизначное число, первые четыре цифры которого обозначают дату производства. Например, серийный номер 0606xxxxxx означает, что изделие было произведено в июне (шестой месяц) 2006 года.

GB

A production date of the item is indicated in the serial number on the technical data plate. A serial number is an eleven-unit number, with the first four figures indicating the production date. For example, serial number 0606xxxxxx means that the item was manufactured in June (the sixth month) 2006.



ЗАПРЕЩЕНО УТИЛИЗИРОВАТЬ С БЫТОВЫМ МУСОРОМ. ОБРАТИТЕСЬ НА СООТВЕТСТВУЮЩИЙ ПУНКТ ПЕРЕРАБОТКИ ЭЛЕКТРИЧЕСКОГО И ЭЛЕКТРОННОГО ОБОРУДОВАНИЯ.