

РУССКИЙ

Бағажыңың весы

- Металлическая скоба
- Ремень
- Корпус устройства
- Дисплей
- Кнопка включения/выключения
- Рулетка
- Крышка батарейного отсека

ВНИМАНИЕ!
Перед началом эксплуатации устройства внимательно прочитайте настоящую инструкцию по эксплуатации и сохраните её для использования в качестве справочного материала.
Использовать устройство только по его прямому назначению, как изложено в данной инструкции. Неправильное обращение с устройством может привести к его поломке, причинению вреда здоровью или его имущества.
• Обращайтесь с весами аккуратно, как с любым измерительным прибором, не подвергайте весы воздействию высоких или низких температур, повышенной влажности, избегайте воздействия прямых солнечных лучей и не роняйте устройство.
• Не допускайте попадания жидкости внутрь корпуса весов, данное устройство не является водонепроницаемым.
• Запрещается использовать весы в местах с повышенной влажностью воздуха (более 80%), не погружайте корпус весов в воду или в любые другие жидкости во избежание нарушения правильности показаний весов или выхода их из строя.

- Кромки измерительной ленты рулетки (6) острые и представляют опасность. Обращайтесь с измерительной лентой крайне осторожно!
- Если измерительная лента застряла и не убирается в корпус устройства, не сгибайте и не скручивайте её. Постарайтесь аккуратно убрать ленту на место.
- Запрещается использовать устройство для взвешивания вещей, вес которых превышает максимально допустимый предел взвешивания весов.
- Из соображений безопасности детей не оставляйте детей надзора полнотеловые пакеты, используемые в качестве упаковки.
- Внимание!** Не разрешайте детям играть с полиэтиленовыми пакетами или плёнкой. **Опасность ударами!**
- Не разрешайте детям использовать устройство в течение минуты, после чего весы автоматически отключаются.
- Данное устройство не предназначено для использования детьми и людьми с ограниченными возможностями, если только людям, находящимся под наблюдением взрослых.
- Не разрешайте детям использовать устройство в качестве игрушки.
- Данное устройство не предназначено для использования детьми и людьми с ограниченными возможностями, если только людям, находящимся под наблюдением взрослых.
- Запрещается самостоятельно ремонтировать устройство.
- Запрещается самостоятельно разбирать и ремонтировать весы, по вопросам технического обслуживания и ремонта обращайтесь в авторизованные (уполномоченные) сервисные центры.

- Из соображений безопасности детей не оставляйте детей надзора полнотеловые пакеты, используемые в качестве упаковки.
- Внимание!** Не разрешайте детям играть с полиэтиленовыми пакетами или плёнкой. **Опасность ударами!**
- Не разрешайте детям использовать устройство в течение минуты, после чего весы автоматически отключаются.
- Данное устройство не предназначено для использования детьми и людьми с ограниченными возможностями, если только людям, находящимся под наблюдением взрослых.
- Запрещается использовать устройство в качестве игрушки.
- Данное устройство не предназначено для использования детьми и людьми с ограниченными возможностями, если только людям, находящимся под наблюдением взрослых.
- Запрещается самостоятельно разбирать и ремонтировать весы, по вопросам технического обслуживания и ремонта обращайтесь в авторизованные (уполномоченные) сервисные центры.

Взвешивание с использованием тары

- Проденьте ремень (2), например, в ручку сумки, одежды и закрепите его металлической скобой (1) (рис. 1).
- Включите весы, нажав кнопку включения/выключения (5), прозвучат два звуковых сигнала, загорится подсветка дисплея, и на дисплее (4) отобразится показание «0.00» кг.
- Поднимите весы и удерживайте их до отображения веса тары и значок «+», повторно нажмите кнопку (5), прозвучит звуковой сигнал, показание веса тары обнуляется, и на дисплее отобразится значок «+».
- Положите в тару взвешиваемый груз и поднимите весы, на дисплее отобразится вес груза без тары, прозвучат два звуковых сигнала, при этом на дисплее (4) отобразится значок «+» и «H».
- По окончании работы нажмите и удерживайте кнопку (5) для того, чтобы отключить устройство.

Примечание

- Минимальный вес тары должен быть не менее двух килограммов.
- Вес отображается на дисплее в течение 2 минут, после чего весы автоматически отключаются.

Рулетка

- Используйте рулетку (6) для измерения линейных размеров.
- Во избежание повреждения рулетки не вытягивайте измерительную ленту дальше отметки «100».
- Кромки измерительной ленты (6) острые и представляют опасность. Обращайтесь с измерительной лентой крайне осторожно!
- Если измерительная лента застряла и не убирается в корпус устройства, не сгибайте и не скручивайте её. Постарайтесь аккуратно убрать ленту на место.

Чистка и уход

Протирайте корпус весов слегка влажной тканью, после чего вытрите прибор насухо. Запрещается для чистки использовать абразивные моющие средства или растворители.

Храните весы в сухом прохладном месте, недоступном для детей.

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ

Элементы питания: 2 x 1,5 В типоразмера «AAA». Условия хранения: только для использования внутри помещения при температуре от 0°С до +40°С

Относительная влажность: 20-80% Диапазон взвешивания: от 50 г до 50 кг

Производитель оставляет за собой право изменять характеристики приборов без предварительного уведомления

Внимание!

Протека элемент питания может стать причиной травмы или повреждения устройства. Чтобы избежать повреждения, следуйте приведенным ниже рекомендациями:

- вынимайте элементы питания, если устройство не будет использоваться в течение длительного времени;
- не разбирайте элементы питания, не подвергайте их воздействию высокой температуры;совершеномн заменяйте элементы питания.

Заманя элементов питания

- При низком заряде элементов питания на дисплее (4) отобразится значок «Lo».
- Выкрутите фиксирующий шуруп из крышки батарейного отсека (7) и снимите крышку (7).
- Установите в батарейный отсек два элемента питания типоразмера «AAA» (не входят в комплект поставки), строго соблюдая полярность (рис. 2).
- Установите крышку батарейного отсека (7) на место и зафиксируйте её шурупом.
- Если весы не используются продолжительное время, извлеките элементы питания из батарейного отсека.

Выбор единиц измерения

- Когда устройство выключено, нажмите и удерживайте кнопку включения/выключения (5), при этом вы услышите два звуковых сигнала, устройство включится, на дисплее отобразится мигающий значок текущих единиц взвешивания.
- Послеодержания нажатиями кнопки (5) выберите единицы взвешивания: «кг» (килограммы) или «lb» (фунты).
- Через несколько секунд прозвучит звуковой сигнал, подтверждающий выбор единиц взвешивания, при этом значок «kg» или «lb» будет светиться постоянно.

Взвешивание

Внимание!

- Не пытайтесь не можете поднять свой багаж, не пытайтесь его взвешивать.
- Для точности взвешивания багажа необходимо, чтобы весы располагались горизонтально над багажом.
- Отображение знака «Err» на дисплее (4) указывает на чрезмерно большой вес, взвешиваемый на весах. Срочно опустите багаж, чтобы предотвратить повреждение весов.
- Проденьте ремень (2), например, в ручку чемодана и закрепите его металлической скобой (1) (рис. 1).
- Встаньте сбоку от багажа.
- Включите весы, нажав кнопку включения/выключения (5), прозвучат два звуковых сигнала, загорится подсветка дисплея, и на дисплее (4) отобразится показание «0.00» кг.
- Держите весы в руке, согните ноги в коленях и, не сгибая спину, поднимите чемодан и зафиксируйте его. Для определения веса багажа, достаточно лишь приподнять его.
- Как только вес будет определен, вы услышите два звуковых сигнала, и на дисплее (4) отобразится вес багажа и появится значок «H».

Примечание

- Во время взвешивания не раскачивайте багаж.
- Не держите багаж близко к телу и не прислоняйте его к себе.
- Повторно нажатием кнопки (5) можете обнулить показание веса и продолжить взвешивание.
- По окончании работы нажмите и удерживайте кнопку (5) для того, чтобы отключить устройство.
- Если весы работают неправильно, попробуйте отключить питание, для этого извлеките элементы питания из батарейного отсека, после чего установите элементы на место, соблюдая полярность, и включите весы.

Примечание

- Во время работы нажмите и удерживайте кнопку (5) для того, чтобы отключить устройство.
- Если весы работают неправильно, попробуйте отключить питание, для этого извлеките элементы питания из батарейного отсека, после чего установите элементы на место, соблюдая полярность, и включите весы.
- По окончании работы нажмите и удерживайте кнопку (5) для того, чтобы отключить устройство.
- Этот тип не intended for usage as a toy.
- This unit is not intended for use by children or disabled persons unless they are given all the necessary and understandable instructions by a person who is responsible for their safety on safety measures, and information about danger that can be caused by improper usage of the unit.
- Do not repair the unit by yourself.
- Do not dismantle or repair the scale by yourself, refer to authorized service centers for maintenance and repair.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Weight measurement

Attention!

- If you can not raise your luggage, do not try to weigh it.
- For accurate luggage weighing, the scale needs to be positioned horizontally over the luggage.
- When the display (4) shows icon «Err» it indicates that the luggage is too heavy. Lower the luggage immediately to prevent scale damage.
- Pass the belt (2), e.g. through a suitcase handle and fix it with the metal hook (1) (Fig. 1).
- Stand beside the luggage.
- Switch the scale on by pressing the on / off button (5), you will hear two sound signals, the display illumination will light up and the display (4) will show the readings «0.00» kg.
- Hold the scale in hand, bend your knees and without bending your back, raise your suitcase and fix it. To measure the weight of luggage, all you need is just to raise it slightly.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Notes

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

ENGLISH

Luggage scale

- Metal hook
- Belt
- Unit body
- Display
- On/off button
- Tare measure
- Battery compartment lid

ATTENTION!
Read this instruction manual carefully before using the unit and keep it for future reference.
Use the unit for intended purposes only, as specified in this manual. Mishandling the unit can lead to its breakage and cause harm to the user or damage to his/her property.
• Handle your scale with care, as it is a precision instrument, do not subject it to high or low temperatures, high humidity, never expose it to direct sunlight and do not drop it.
• Avoid getting of liquids into the scale body, this appliance is not waterproof.
• Do not store or use the scale in a room with hi air humidity (above 80%), do not immerse the scale body into water or other liquids as this may cause failure of scale indication or its breakdown.
• The edges of the tape (6) are sharp and dangerous. Handle the tape measure with care!

- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
 - Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.
- Notes**
- Do not swing the luggage while weighing.
 - Do not hold luggage close to your body and do not rest it against yourself.
 - If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
 - Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Weight measurement

Attention!

- If you can not raise your luggage, do not try to weigh it.
- For accurate luggage weighing, the scale needs to be positioned horizontally over the luggage.
- When the display (4) shows icon «Err» it indicates that the luggage is too heavy. Lower the luggage immediately to prevent scale damage.
- Pass the belt (2), e.g. through a suitcase handle and fix it with the metal hook (1) (Fig. 1).
- Stand beside the luggage.
- Switch the scale on by pressing the on / off button (5), you will hear two sound signals, the display illumination will light up and the display (4) will show the readings «0.00» kg.
- Hold the scale in hand, bend your knees and without bending your back, raise your suitcase and fix it. To measure the weight of luggage, all you need is just to raise it slightly.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Notes

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

Attention!

- Do not swing the luggage while weighing.
- Do not hold luggage close to your body and do not rest it against yourself.
- If the measuring tape gets stuck and can not be rolled into the unit body, do not bend and twist it. Try to put the tape back to its place carefully.
- Once the weight has been measured, you will hear two sound signals and the display (4) will show the weight of luggage and the “H” icon.

DEUTSCH

Gepäckwaage

- Metallklammer
- Band
- Gerätgehäuse
- Display
- Ein-/Ausschalttaste
- Maßband
- Batteriefachdeckel

ACHTUNG!
Vor der ersten Inbetriebnahme des Geräts lesen Sie diese Bedienungsanleitung aufmerksam durch und bewahren Sie diese für weitere Referenz auf.
Benutzen Sie dieses Gerät nur bestimmungsgemäß und für die Bestimmungszwecke. Nicht ordnungsgemäße Nutzung des Geräts kann zu seiner Störung führen und einen gesundheitlichen und materiellen Schaden beim Nutzer hervorrufen.
• Gehen Sie mit der Waage wie mit jedem Maßgerät sehr vorsichtig um, setzen Sie die Waage hohen oder niedrigen Temperaturen, erhöhter Feuchtigkeit, direkten Sonnenstrahlen nicht aus und lassen Sie sie nicht fallen.
• Achten Sie darauf, dass keine Flüssigkeit ins Waagegehäuse eindringt, dieses Gerät ist nicht wasserdicht.
• Es ist nicht gestattet, die Waage in den Räumen mit erhöhter Feuchtigkeit (mehr als 80%) aufzubewahren oder zu benutzen, tauchen Sie das Waagegehäuse ins Wasser oder andere Flüssigkeiten nicht ein, um die Korrektheit der Angaben der Waage nicht zu stören oder ihren Ausfall zu vermeiden.

- Die Ränder des Maßbands (6) sind scharf und gefährlich. Gehen Sie mit dem Maßband sehr vorsichtig um.
- Falls das Maßband steckengeblieben ist und ins Gerätgehäuse nicht eingesteckt wird, ziehen Sie es vorsichtig heraus, beachten Sie dabei die Polarität (Abb. 2).
- Nach der Beendigung des Betriebs drücken Sie die Taste (5), um das Gerät auszuschalten.
- Es ist nicht gestattet, das Gerät für die Abwiegung von Sachen, deren Gewicht die maximale Belastbarkeit der Waage offenkundig übersteigt, zu benutzen.
- Aus Kindersicherheitsgründen lassen Sie die Batterien zurück ein, indem Sie die Polarität beachten, und schalten Sie die Waage ein.
- Achtung!** Lassen Sie Kinder mit Plastiklatten innerhalb von 2 Minuten anwesend, danach schaltet sich die Waage automatisch aus.

Abwiegen

Achtung!

- Falls Sie Ihr Gepäck nicht aufheben können, versuchen Sie nicht, es abzuwiegen.
- Zur Genauigkeit des Gepäckabwiegens ist es notwendig, dass sich die Waage horizontal über dem Gepäck befindet.
- Die Abbildung des Zeichens «Err» auf dem Display (4) zeigt von zu großem Gewicht, das auf der Waage abgelesen wird. Legen Sie die Waage sofort hin, um die Beschädigung der Waage zu vermeiden.
- Ziehen Sie das Band (2), zum Beispiel, durch den Griff des Koffers durch und befestigen Sie es mittels der Metallklammer (1) (Abb. 1).
- Stehen Sie seitlich vom Gepäck.
- Schalten Sie die Waage ein, indem Sie die Ein-/Ausschalttaste (5) drücken, zwei Tonsignale ertönen, die Beleuchtung des Displays aufleuchtet, und auf dem Display (4) werden die Angaben «0.00» kg angezeigt.
- Halten Sie die Waage in der Hand, biegen Sie Ihre Knie, heben Sie den Koffer auf und befestigen Sie ihn, ohne der Rücken zu biegen. Zur Feststellung des Gepäckgewichts ist es genug, das Gepäck nur aufzuheben.
- Sobald das Gewicht festgestellt ist, hören Sie zwei Tonsign

